


**‘Flow Turndown’ can be misleading.
‘Flow Coverage’ should be considered.**


20:1 Turndown is not 4 times more Coverage than 5:1 Turndown

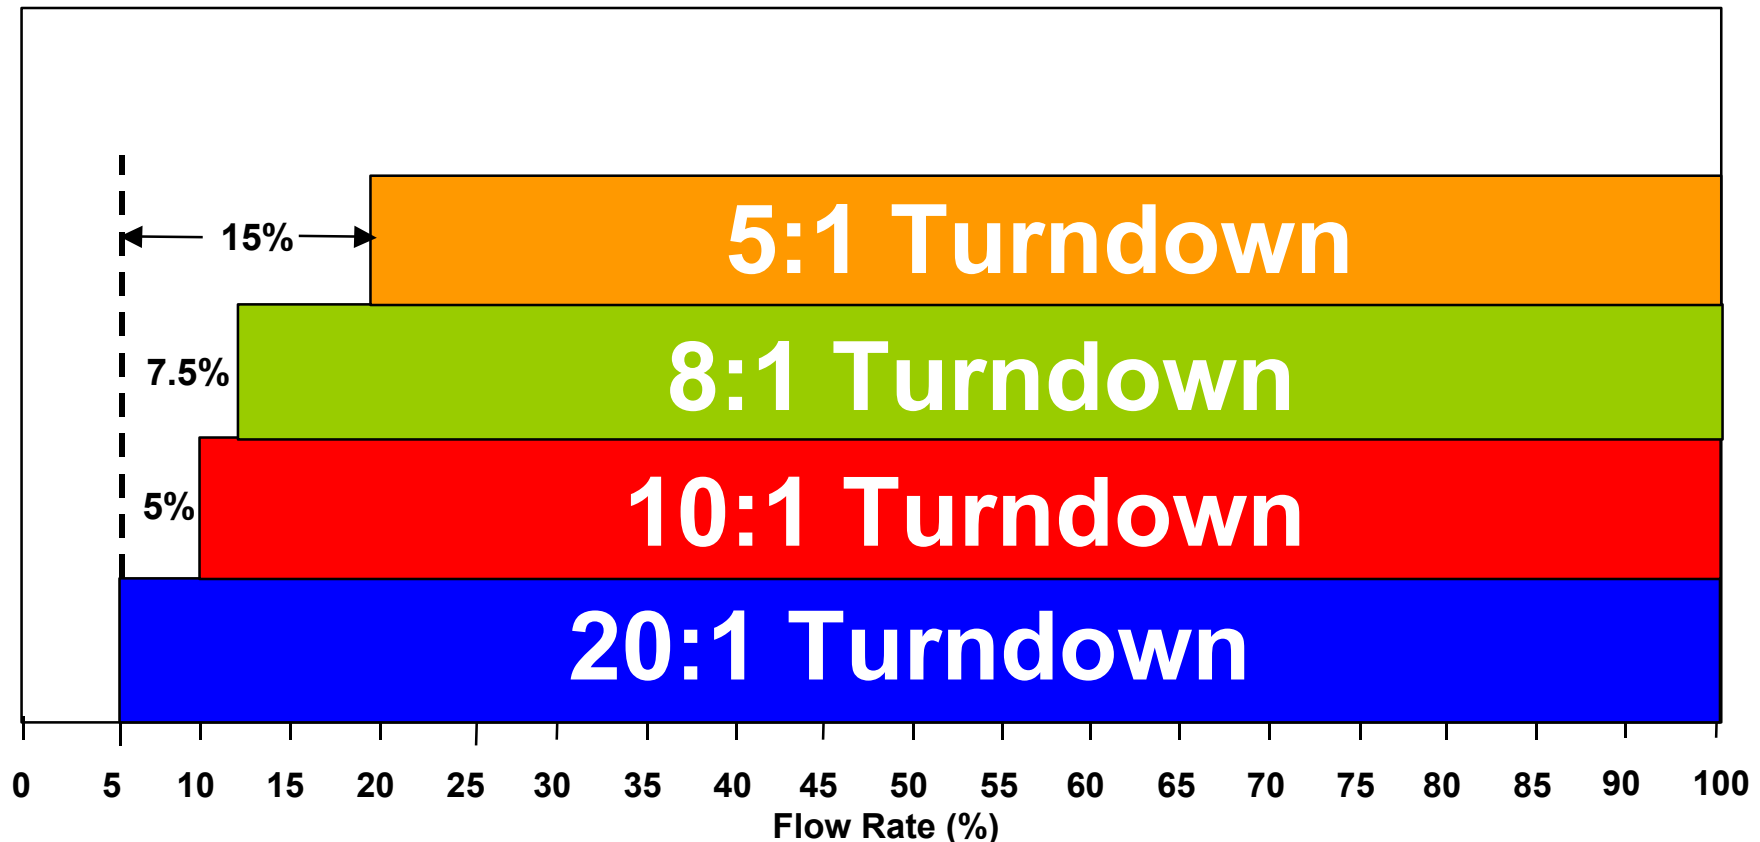

**20:1 Turndown = Coverage from 100% flow to 5% flow
5:1 Turndown = Coverage from 100% flow to 20% flow**

'Turndown' is often specified from **Meter Maximum**.
Coverage from **User Maximum Flow** should be considered.

Low flow cutoff can limit flow coverage

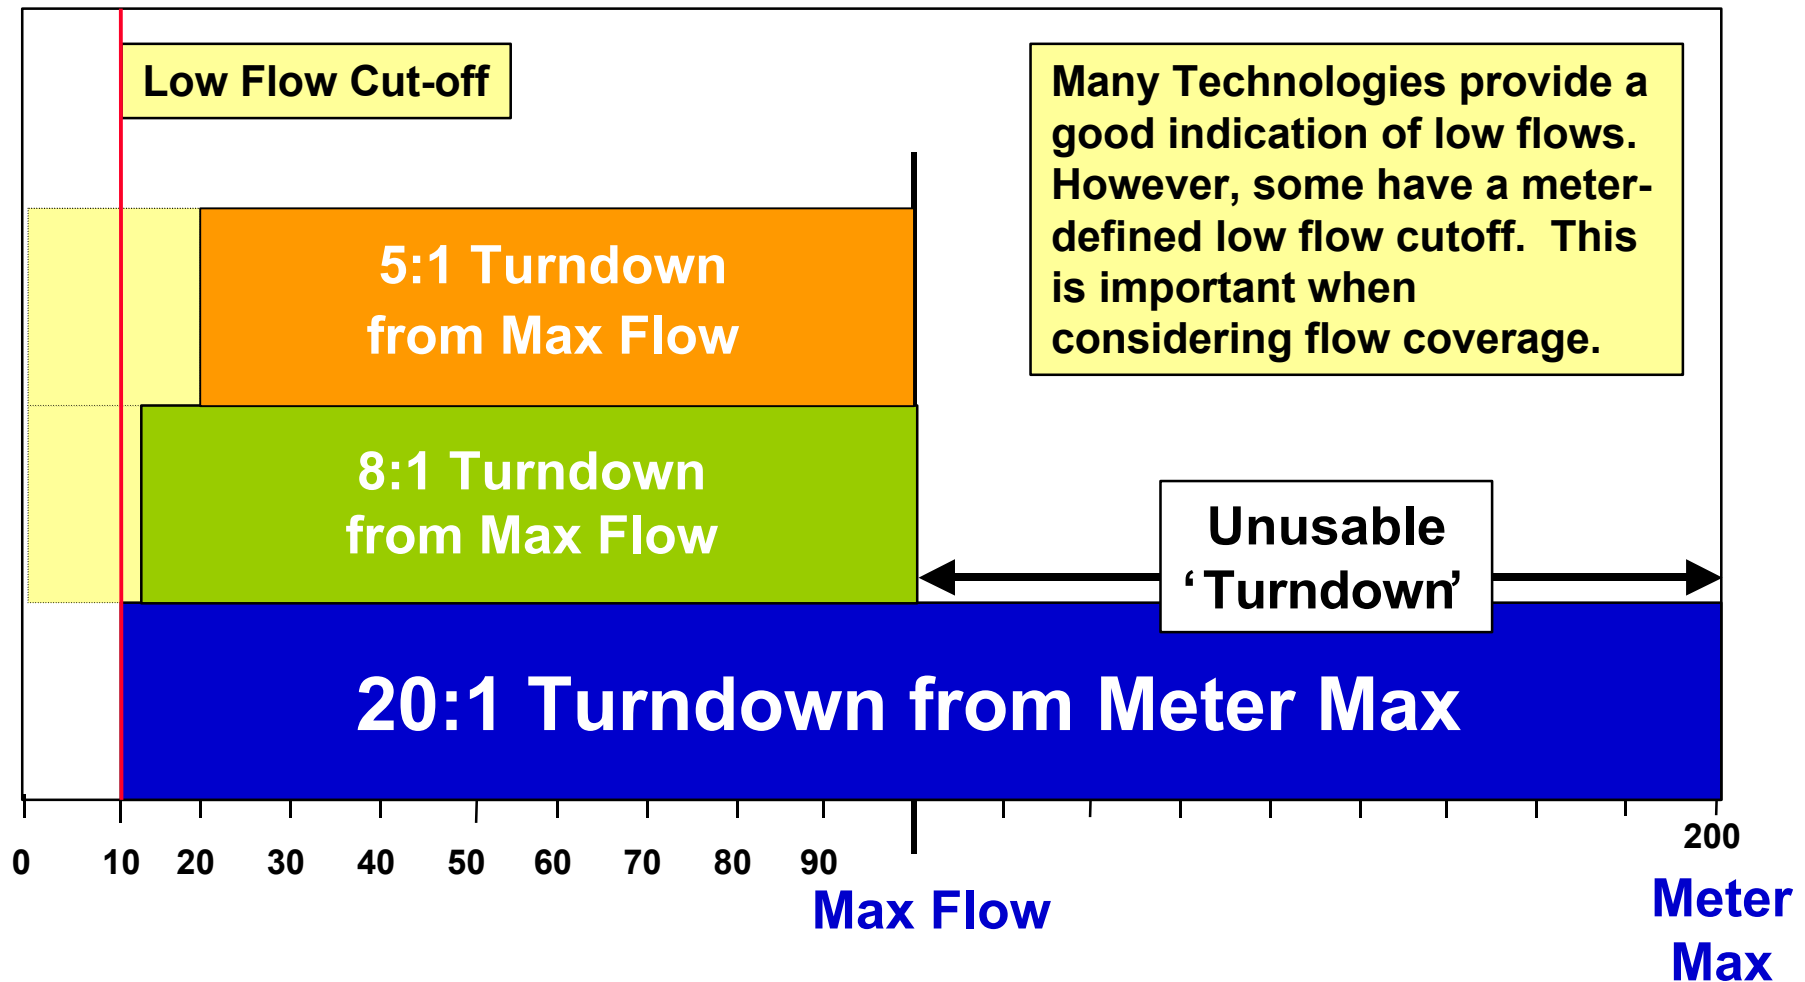

Many Technologies provide a good indication of low flows. However, some have a meter-defined low flow cutoff. This is important when considering flow coverage.

Example: Max Flow is 1/2 of Meter Max for '20:1' flow technology.